


1793K DRILL/DRIVER KIT

EXPLODED VIEW

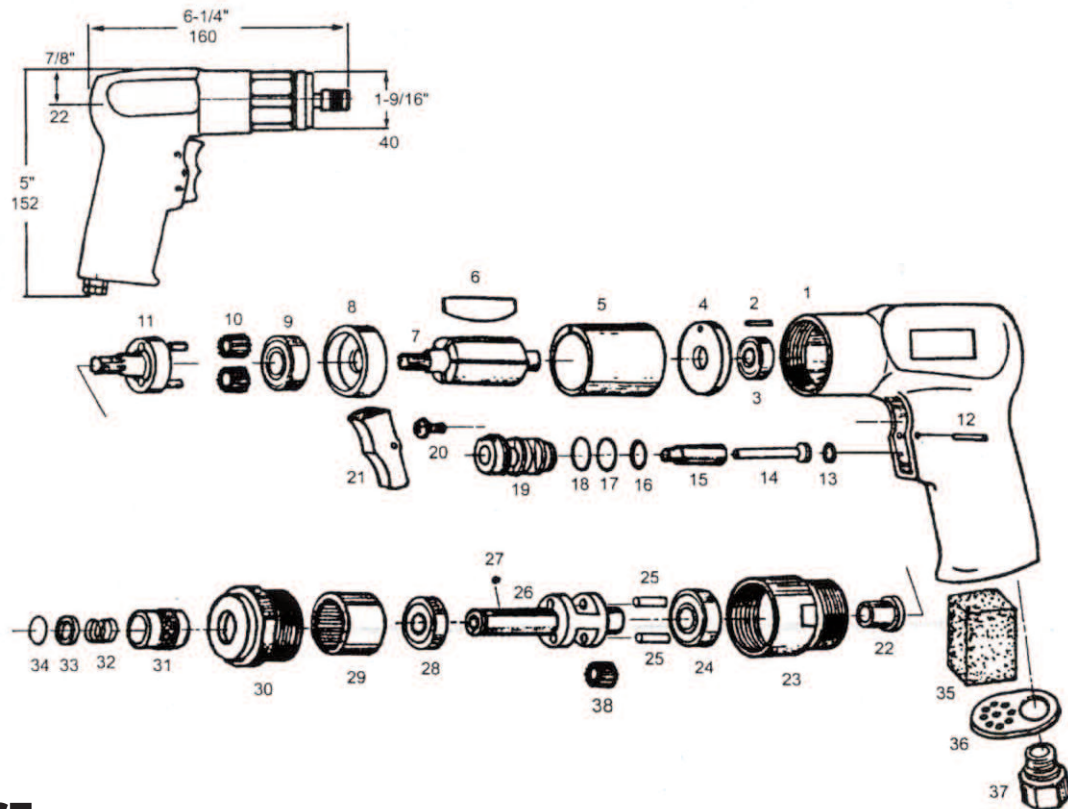

PARTS LIST — FOR REFERENCE ONLY

Index Number	Part Number	Description	Qty	Index Number	Part Number	Description	Qty.
1	35001	Motor Housing	1	25	35059	Planet Pin	2
2	25006	Spring Pin	1	26	90010A	Planet Cage	1
3	25004	Ball Bearing	1	27	35094	Steel Ball	3
4	25003	Reat Plate	1	28	35069	Ball Bearing	1
5	35009	Cylinder	1	29	35012A	Internal Gear	1
6	25007	Rotor Blade	5	30	35014S	Screw Housing	1
7	35002A	Rotor	1	31	35023	Q-Change Bushing	1
8	35008	Front Plate	1	32	35018	Spring	1
9	25023	Ball Bearing	1	33	35024	Ring Washer	1
10	35018B	Gear & Bushing	3	34	35019	Wire Ring	1
11	60011A	Planet Cage	1	35	35049	Muffler	1
12	23102	Roll Pin	1	36	35062	Diffuser Exhaust	1
13	35016	O-Ring	2	37	35061	Air Inlet Bushing	1
14	35007	Valve Stem	2	38	90014B	Gear & Bushing	2
15	35008	Sleeve	2				
16	35039	O-Ring	2				
17	35003	O-Ring	2				
18	10445	O-Ring	2				
19	35005	Throttle Bushing	2				
20	35004	Screw	1				
21	35002	Trigger	1				
22	90016A	Bushing	1				
23	35015A	Housing	1				
24	35060	Ball Bearing	1				

FOOTNOTES



10000 SE Pine Street
Portland, OR 97216
503-254-6600
FAX 503-255-2615

When ordering spare parts, please specify tool type, part number and description.